



LIFESTYLE® V35/V25 HOME ENTERTAINMENT SYSTEMS


LIFESTYLE® T20/T10 HOME THEATER SYSTEMS


Setup Guide | Guía de instalación | Guide d'installation


SAFETY INFORMATION

Please read this guide

Please take the time to follow the instructions in this guide carefully. They will help you set up and use your system properly so you can enjoy its advanced features. Please save this guide for future reference.

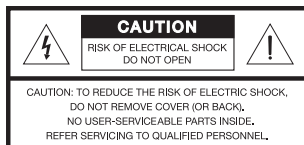

 The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this guide.

WARNINGS:

- To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.
- Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.
- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.
- Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 100°C (212°F), or incinerate. Dispose of used batteries promptly. Replace only with a battery of the correct type and model number.
- Contains small parts that may be a choking hazard. Not suitable for children under age 3.



CAUTIONS:

- Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance, and may void the warranty.
- Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.

Notes:

- Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- The product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
- This product is intended to be used only with the power supply provided.
- The product label is located on the bottom of the product.

Additional safety information

See the additional instructions on the *Important Safety Information* sheet enclosed in the shipping carton.

Batteries



Please dispose of used batteries properly, following any local regulations. Do not incinerate.

Class B emissions

This device complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. It must not be co-located or be operating in conjunction with any other antennas or transmitters.



This product conforms to all EU Directive requirements as applicable by law. The complete Declaration of Conformity can be found at www.Bose.com/compliance.

©2010 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Welcome


Thank you for choosing a Bose® LIFESTYLE® system for your home. This guide provides step-by-step instructions for setting up your new system. There are two phases to the setup process:

Physical setup phase: Placing the system components and connecting them together.

Interactive setup phase: Completing your setup following the interactive steps on your TV screen provided by the Unify™ intelligent integration system.

Unpacking

The parts of your new system are packaged in four numbered kits plus a small box containing the appropriate power cords:

- **1** Control console kit
- **2** Acoustimass® module kit
- **3** Speaker kit
- **4** Interactive kit
-  Power cord kit (used with kits 1 and 2)

Starting with Kit 1, unpack each kit and set up its contents before unpacking the next one.

Be sure to save all of the packing materials. These provide the safest means for any necessary shipping or transporting.

If any part appears damaged, do not attempt to use it. Notify Bose or your authorized Bose dealer immediately. For Bose contact information, refer to the address sheet included in Kit 4.


SYSTEM SETUP

1


Control console kit

What you need for the following steps:


From Kit 1

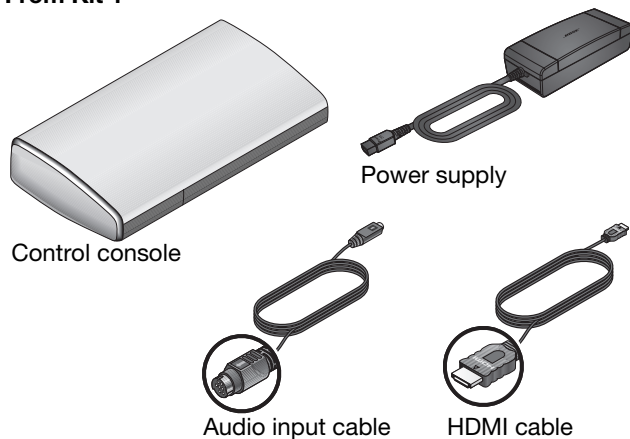

From the power cord kit

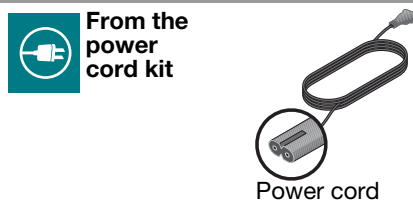


1. Place the control console on a flat, stable surface near your TV.

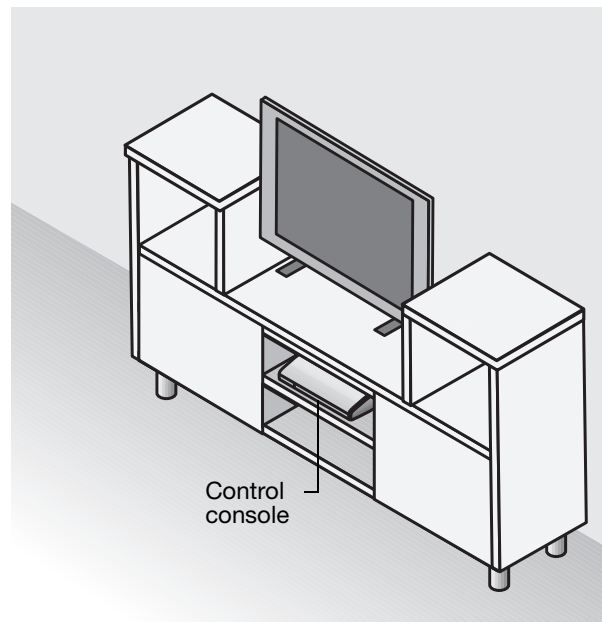


Note: Until your system is completely installed, it may be helpful to keep the control console positioned for easy access to its rear connection panel.

2. Plug one end of the HDMI cable into an HDMI INPUT connector on your TV.

If an HDMI cable is already connected to an HDMI input on your TV, you can use this one. Just disconnect the other end.

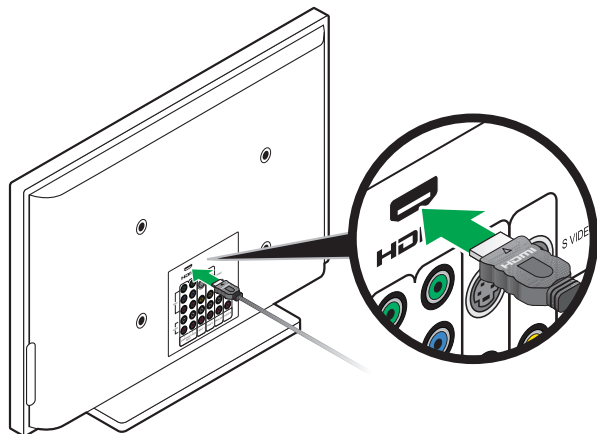

3. Plug the other end of the HDMI cable you are using into the connector labeled **HDMI OUT Video to TV** on the control console.

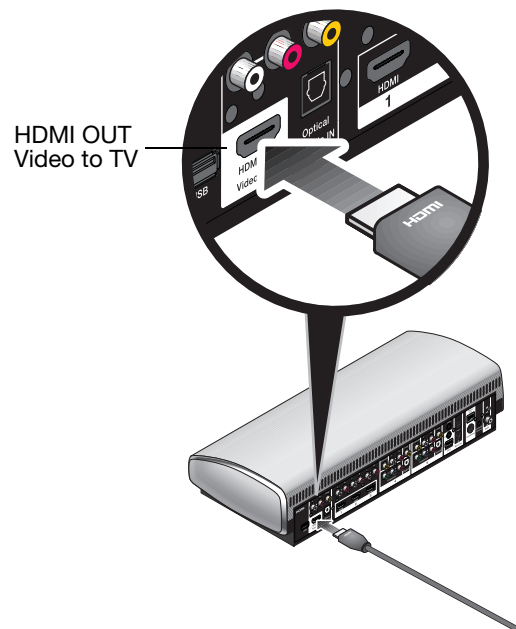


SYSTEM SETUP


4. Plug one end of the audio input cable into the **Acoustimass® Module** connector on the control console.


Make sure the flat surface with the arrow on the plug faces up.

Leave the other end of the cable on the floor. You will be asked to connect it while setting up the next kit.

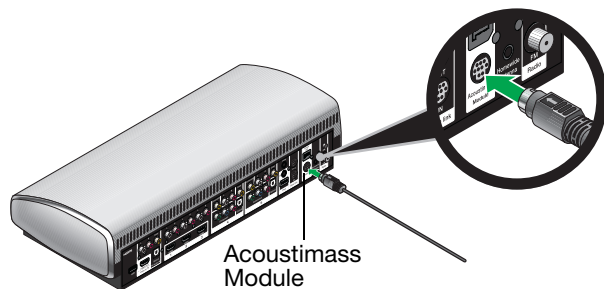

5. Plug the power supply output cord into the control console **Power** connector.

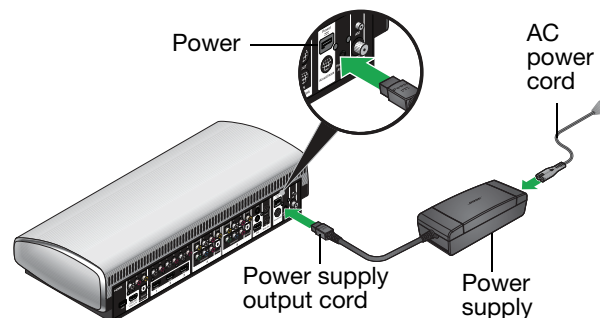


6. Remove a power cord from the power cord kit. 
7. Plug one end of the power cord into the power supply. *Make sure you push the plug in as far as it can go.*
8. Plug the other end of the power cord into a live AC (mains) power outlet.
9. Continue with Kit **2** on the next page.

2

Acoustimass® module kit

What you need for the following steps:

From Kit 2

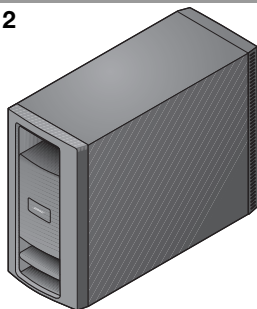

Acoustimass module




**From the
power
cord kit**




Power cord


1. Place the Acoustimass module on the floor at the same end of the room as the TV. Make sure there is a live AC outlet nearby.

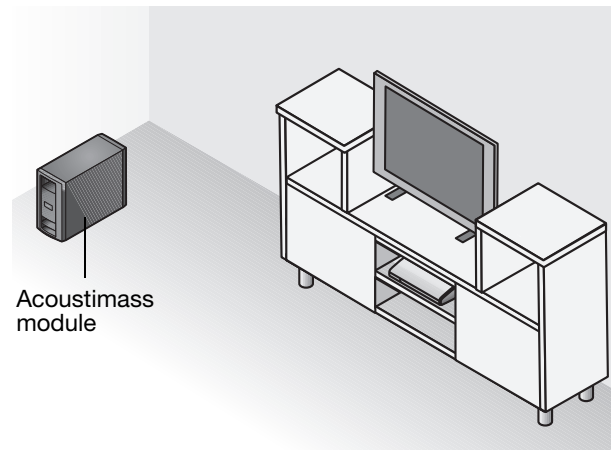

2. Lay the module on its side and locate the connector panel.

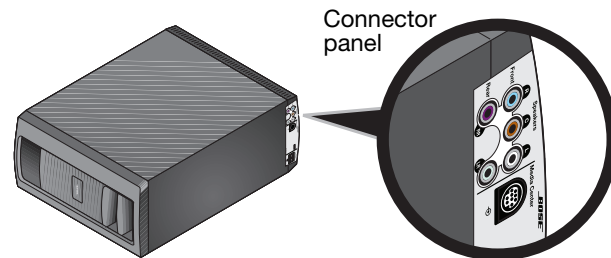


SYSTEM SETUP

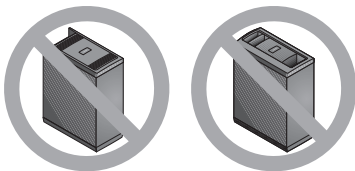

CAUTION: DO NOT stand the Acoustimass® module on its front or back end.

3. Plug the free end of the audio input cable into the **Media Center** connector on the Acoustimass module.


Make sure the flat surface with the arrow faces the front of the module.

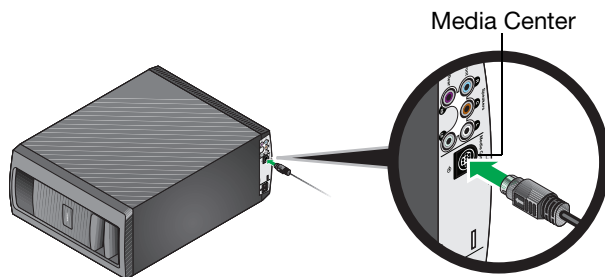

4. Remove a power cord from the power cord kit.



5. Plug one end of the power cord into the **AC Power** connector on the Acoustimass module. *Make sure you push the plug in as far as it can go.*

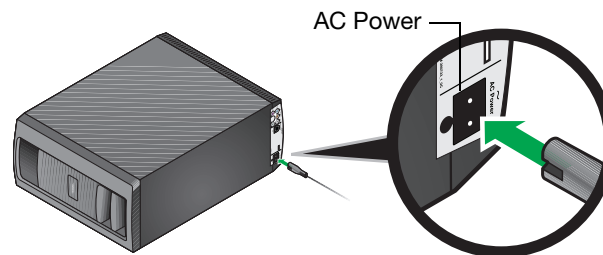

6. Plug the other end of the power cord into a live AC (mains) power outlet.
7. Continue with Kit **3** on the next page.

 
3

Speaker kit


What you need for the following steps:

From Kit 3: System speakers
(one set of the three types shown)

Jewel Cube® speakers




(4) Left or right, front or rear speaker

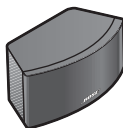


(1) Center front speaker

 Direct/Reflecting® cube speaker arrays



 (4) Left or right, front or rear speaker



(1) Center front speaker

Virtually Invisible® single cube speakers



(5) Left or right, front or rear, and center front speaker

Front speaker cables



Left front (L)
White




Center front (C)
Brown



Right front (R)
Light blue

Rear speaker cables

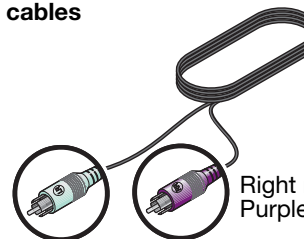


Left rear (LR)
Light green

Right rear (RR)
Purple

Note: You can place system speakers on wall brackets or floor stands. To purchase these accessories, contact your local Bose dealer or visit www.Bose.com.

SYSTEM SETUP


1. Place the center front speaker on a stable and level surface directly above or below the center of your TV screen as in the following example.

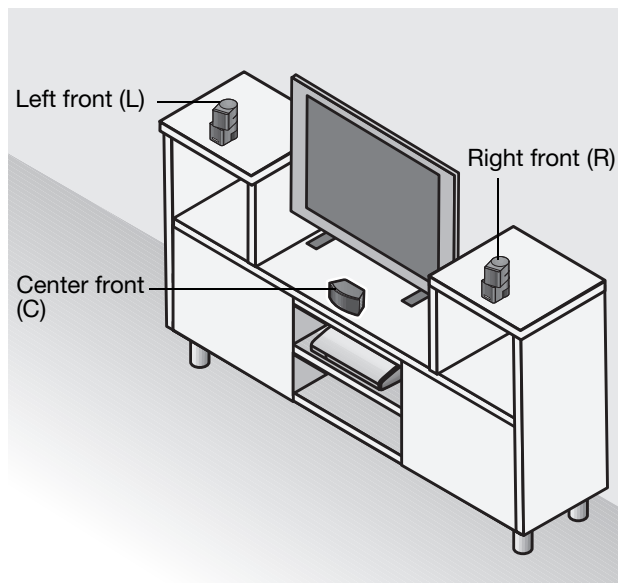


2. Place one speaker to the left and one to the right of the TV.
 - Keep each speaker within 3 ft (1 m) of the TV screen to prevent too much separation of the sound from the picture. Vary this distance to suit your room conditions and personal preference.
 - If placing the speakers in an enclosed bookcase shelf, position them at the front edge of the shelf.
 - If you have Jewel Cube® or Direct/Reflecting® cube speakers, rotate the cubes so that one cube of each speaker points forward into the room and the other points at a side wall to create reflected sound.




- 3.** Place the rear speakers toward the back of the room behind the viewers at ear height (when seated) or higher, if possible.

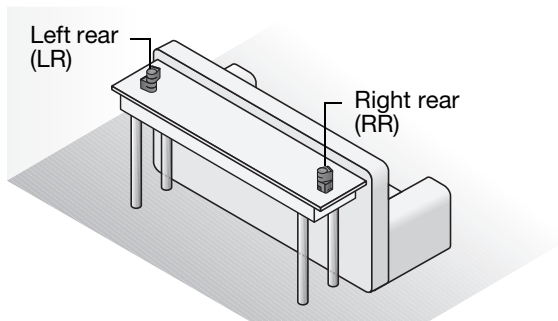


- Make sure the 50 ft (15.2 m) rear speaker cables will reach from the speakers to the Acoustimass® module.
- Aim the speakers away from the listeners to prevent them from pinpointing the exact location of the sound source.
- If you have Jewel Cube® or Direct/Reflecting® cube speakers, rotate the cubes so that one cube of each speaker points forward into the room and the other points at a side wall to create reflected sound.

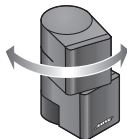

- 4.** Locate the colored connectors on the bottom panel of the Acoustimass module.

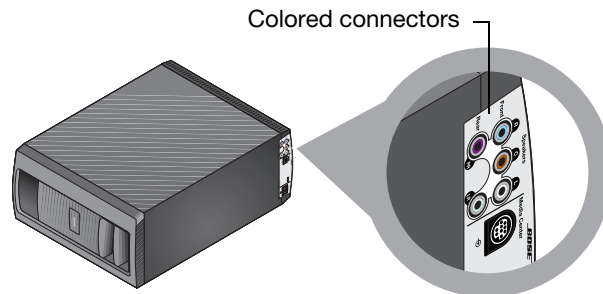


- 5.** Plug the speaker cables into the Acoustimass module connectors. Be sure to match each cable plug to each connector by the color code.

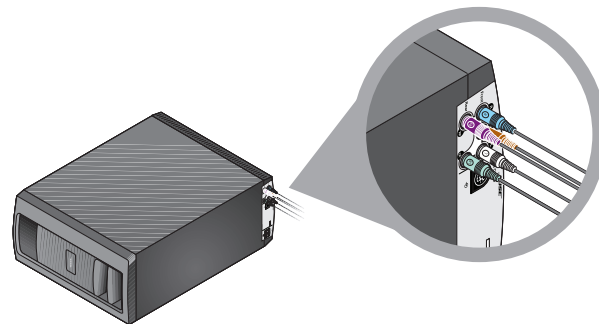


SYSTEM SETUP

6. Locate the speaker position markings on the free ends of the speaker cables.

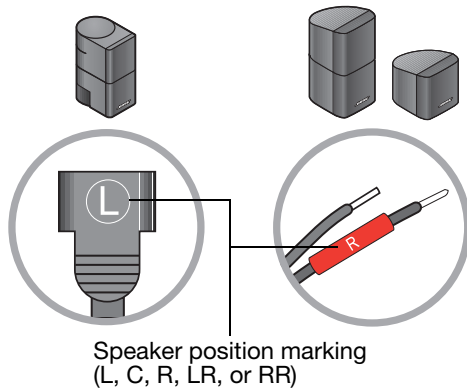


7. Using the speaker position markings, run each cable out to its respective speaker as in the following setup example of a room.

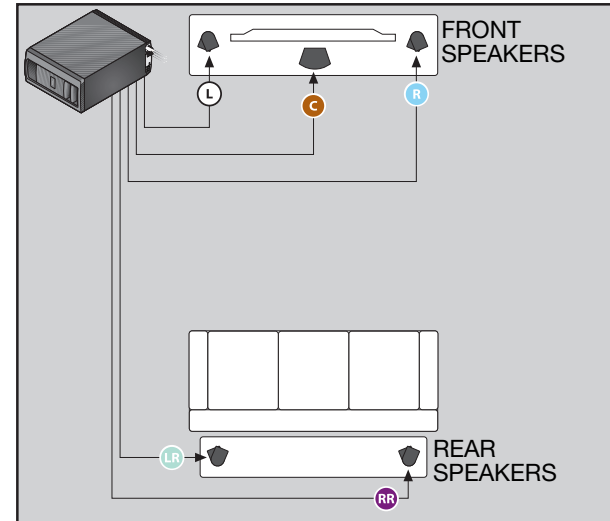

8. Connect the speaker cable to the type of speaker you have.


For Jewel Cube® speakers:

Insert the plug into the speaker connector.

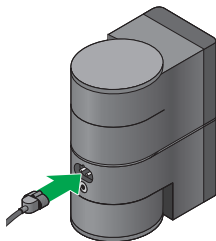


For Direct/Reflecting® and Virtually Invisible® single cube speakers:

Press the button and insert the wires. Connect the red-collared wire to the red connector. Connect the other wire to the black connector.

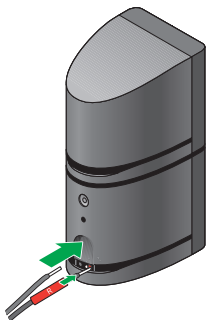


Note: The rear speaker cables for Direct/Reflecting® and Virtually Invisible® cube speakers are webbed together. You can pull them apart as needed.

9. Put the Acoustimass® module in its final position:
- Upright (BEST) or on either side (ALTERNATE).

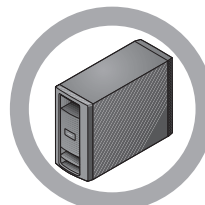

BEST

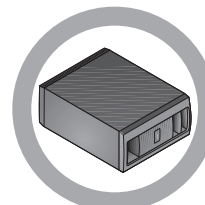


ALTERNATE

- With the front opening facing into the room.
- At least 18 in (45 cm) from any TV to avoid magnetic interference with the TV image. Move it farther away if you still notice interference.

CAUTION: Do not put electronic media, such as video or audio tapes, on or next to the module for long periods of time. The magnetic field surrounding the module may erase some or all of the recorded material.

CAUTION: DO NOT BLOCK the ventilation openings on the module. This can cause it to overheat.

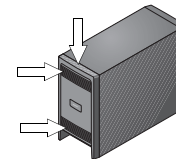

10. Continue with Kit **4** on the next page.

SYSTEM SETUP

4

Interactive kit

What you need for the following steps:

From Kit 4



Remote control
with batteries




ADAPTiQ® audio
calibration
headset

Congratulations! At this point you have set up the control console, the Acoustimass® module, and the speakers. You are now ready to turn on your system and enter the interactive phase of the setup process using the Unify™ intelligent integration system.

IMPORTANT!

- **Before you start, make sure your speakers and Acoustimass module are in their final positions.**
- **Do not connect any devices to the control console at this time. The instructions provided on your TV will tell you when to do this.**

1. Slide the battery compartment cover off the back of the remote control.

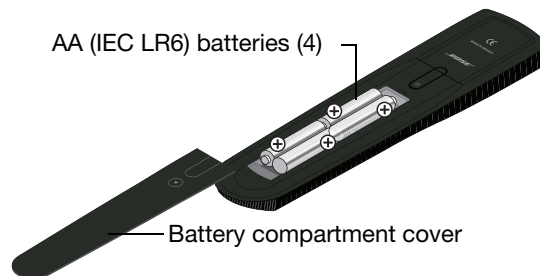

2. Install four AA (IEC LR6) batteries, matching the polarity markings (+ and -) to the markings inside the battery compartment.
3. Slide the battery cover back into place.

4. Press the power button (⏻) on the control console to turn on your system.

Because the system is in a low power state when in standby, it takes several seconds to start. When the power light changes from blinking to steady green, your system is ready to use.



5. Turn on your TV.
6. Using the remote that came with your TV, change the TV input to the one that is connected to your LIFESTYLE® system.
7. Follow the instructions on your TV screen. You will be prompted to do the following:
 - Select your language.
 - Optimize the audio from your system using the ADAPTiQ® audio calibration system.
 - Connect audio/video devices to the control console.
 - Configure your Bose® remote to control your connected devices.

Other Kit 4 items

The remaining items in Kit 4 may or may not be required to set up your LIFESTYLE® system. For more information on using these accessories or adding other devices to your system at another time, see the operating guide.



IR emitter cable



Stereo audio cable



AM antenna*



FM antenna*



Rubber feet
for Acoustimass®
module



Rubber feet
for front center
speaker



iPod/iPhone-
compatible
dock*



Operating guide




USB flash drive
(for system
updating only)

*For LIFESTYLE® V25 and V35 systems only.


SYSTEM SETUP

Applying rubber feet

When placing the Acoustimass® module on bare floors, you can attach the included rubber feet to the bottom of the module for greater stability and to protect your floor.

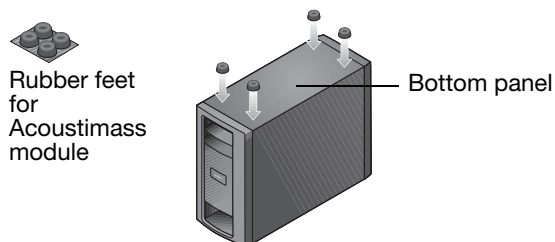

Vibration can cause speakers to move, particularly if placed on a smooth surface like glass or highly polished wood. If you are placing the center speaker on such a surface, you can attach the included rubber feet to the bottom of the speaker for greater stability.

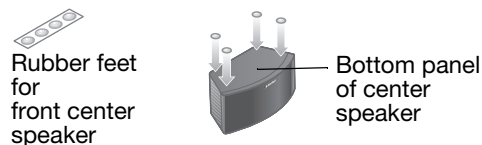

If you have setup problems

If you experience any difficulties during the setup process, such as an unrecognized device remote or a connection error, you can reactivate the interactive setup mode at any time and correct or change part of your system setup. See “Using the Setup Mode” in your system operating guide.

For help in trying to resolve any problems, see the troubleshooting table in your system operating guide.

Contacting customer service

For additional help in solving problems, contact Bose® Customer Service. See the address sheet included in Kit 4.

Applicable only for LIFESTYLE® V25 and V35 home entertainment systems



“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPod and iPhone are trademarks of Apple, Inc., registered in the U.S. and other countries. All other marks are registered trademarks and trademarks of Bose Corporation.





324443-0010

BOSE[®]
Better sound through research[®]

©2010 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM324443 Rev.00